



Horizontal Push Button Emergency Stations

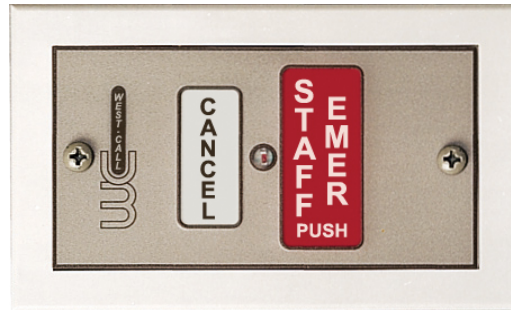

**STAFF
EMERGENCY**

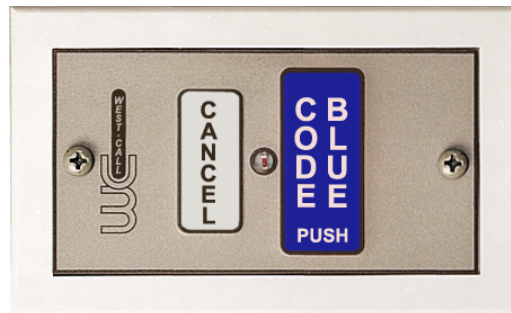

CODE

The Push Button Emergency Station (PBE series) is intended for use in patient rooms and other areas where priority calls require immediate attention. The PBE custom horizontal series consists of a "CODE BLUE" and "STAFF EMER". Both have color-coded push button areas, a color-coded "CANCEL" button, and a red LED indicator. They are designed for patient areas where assistance is needed. They are for use with the West-Call® Odyssey Plus and West-Call® Endeavor systems.

- ▶ Large color-coded call type label for placement of calls
- ▶ Highly visible call LED to assure that a call has been placed
- ▶ Large color-coded "CANCEL" label for cancellation of calls
- ▶ Solid state circuitry
- ▶ Fire retardant high-impact hospital grade molded thermoplastic with inlaid membrane
- ▶ Attractive Lexan membrane (Pantone 1C Warm Grey)
- ▶ Easy plug-in connection into the system wiring

All West-Call® push button devices have a CANCEL button and a call button. Below is a list of the type of push buttons available along with the color of the button and the wording on the button.

VERSIONS AND MODEL NUMBERS:

STATION TYPE	COLOR OF CALL BUTTON	ODYSSEY	ENDEAVOR
STAFF EMERGENCY	RED	PBE-1000/SE/H	EV PBE/SE/H
CODE BLUE	BLUE	PBE-1000/CB/H	EV PBE/CB/H
EMERGENCY STATION CLEAR PROTECTOR	ESP-1000	ESP-1000	

- For use with the West-Call® Odyssey Plus and West-Call® Endeavor systems
- Custom color faceplate available as an option upon request
- Custom wording and colors on membrane available upon request

Operating Voltage	12-30 VDC
Power Consumption	1 watt maximum
Dimensions	2 3/4"H x 4 1/2"W x 1 1/2"D
Mounting	4-inch square backbox with one-gang plaster ring, Raco 190 with 768 one-gang adapter or equivalent. Minimum 2 1/8" depth required. Normal mounting is vertical. For remodel areas, use Raco #500 or 503 with #977 Grip-Lok's or equivalent. Minimum 2 1/2" depth required
Faceplate	Hospital grade UL94V-0 ABS molded thermoplastic with inlaid membrane
Faceplate Color	Standard color is Pantone 1C Warm Grey
Membrane	.010 Lexan with hardcoat finish background color Pantone 4C Warm Grey. Cancel color Pantone 1C and 11C Warm Grey
Lamp Life	500,000 hour minimum
Switch Life	100,000 cycles minimum
Cable Requirement	Use 4 conductor #22AWG cable to associated patient station, SDL-1000 or I/O board. Use 6 conductor #22AWG cable to associated Closure Plus Modules
Termination Requirement	Plug-on connector allows rapid mass termination. Mating connector is a Panduit CE156F22-10
Certifications	UL-1069 for US and Canada, E139082

NOTE: This information should not be used for final design. Consult West-Com for total system requirements. Specifications subject to change without notice.



View West-Com's complete West-Call® line of healthcare communications solutions at www.westcall.com

West-Com Nurse Call Systems, Inc.
 2200 Cordelia Road • Fairfield, CA 94534 • 800-761-1180 • info@westcall.com