


**Features:**

- Equipped with 3 standard ¼” phono sockets for a medical device input or a call cord.
- Each jack is software-configurable for:
  - ‘Latching’ or ‘Momentary’ operation
  - ‘Disabled’ or ‘Enabled’ status
  - Call input value & type
  - ‘Call Cancel’ function when port is configured for ‘Latching’
  - Call delay settings to help reduce ‘false’ calls or to accommodate ventilator machines
- Multi-color status LEDs for each jack quickly indicate port state.
- Includes unique graphic on faceplate to easily identify jacks 1, 2, and 3.
- Jacks are supervised, providing a “Cord Out” alarm when the cord is disconnected.
- Equipped with a “Cord Out” cancel/override button. No need for dummy plugs.

## Connector and Signal Specifications

| Pin / Connector | J1           | J2           | Conductor    |
|-----------------|--------------|--------------|--------------|
| 1               | Transmit (-) | Transmit (-) | White/Blue   |
| 2               | Transmit (+) | Transmit (+) | Blue/White   |
| 3               | Receive (-)  | Receive (-)  | White/Orange |
| 4               | Receive (+)  | Receive (+)  | Orange/White |
| 5               | Ground       | Ground       | White/Green  |
| 6               | Ground       | Ground       | Green/White  |
| 7               | +24VDC       | +24VDC       | White/Brown  |
| 8               | +24VDC       | +24VDC       | Brown/White  |

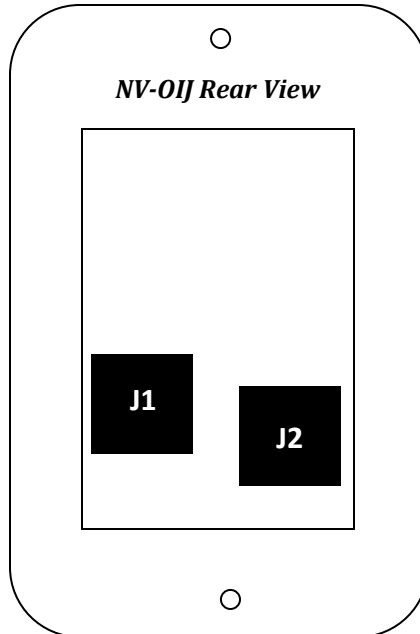

## Device Specifications\*

|                                 |  |
|---------------------------------|--|
| <b>Operating Voltage:</b>       | 24-28 VDC ± 5%   |
| <b>Power Consumption:</b>       | 1 Watt maximum   |
| <b>Size:</b>                    | 4 1/2"H x 2 3/4"W x 1 1/2"D.   |
| <b>Mounting:</b>                | 4-inch square back-box with one-gang plaster ring, Raco 190 with 768 one-gang adapter or equivalent. Minimum 2 1/8" depth required. Normal mounting is vertical. For remodel areas, use Raco #500 or 503 with #977 Grip-Loks or equivalent. Minimum 2 1/2" depth required. |
| <b>Faceplate:</b>               | Stainless steel  |
| <b>Cable Requirement:</b>       | CAT-5 cable for dome light connection and/or "NV" device daisy-chaining.   |
| <b>Termination:</b>             | Plug-in connectors allow rapid mass termination. Mating connectors are two RJ45 connectors.  |
| <b>Lamp Life:</b>               | 500,000 hours minimum  |
| <b>Device/Call Cord Socket:</b> | 1/4" Phono   |

*\*Note: This information should not be used for final design. Consult West-Com for total system requirements. Specifications are subject to change without notice.*



View West-Com's complete West-Call® line of healthcare communications solutions at [www.westcall.com](http://www.westcall.com)

West-Com Nurse Call Systems, Inc.  
2200 Cordelia Road • Fairfield, CA 94534 • 800-761-1180 • [info@westcall.com](mailto:info@westcall.com)